

Manual Firmware Update

Instruction

Purpose

Normally YI Home camera updates the firmware online via YI Home Camera App, no manual work is needed. You are able to encounter some kind of problems as below even the Wi-Fi works well: No voice prompts since power on; App can't pair the camera; App connection always fails; The status light is always yellow or flashing, etc. It's recommended to manually update the latest firmware to fix the problems.

 
Preparations

- PC with Internet Access
- TF Card (microSD Card)
- TF card reader


Update Instructions

1. Format the TF card to FAT32 (file system) via card reader (Default parameter in Windows® format tool).


Note: YI 1080P Home Camera 2 can support up to 64GB TF card, which needs to be formatted to FAT32 with third-party tools.

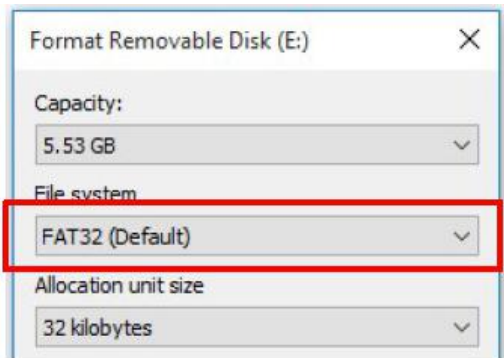

 
2. Download the latest Firmware file from http://www.yitechnology.com/support/firmware_home/id/4.html
3. Copy the file to the TF card's root directory
 - YI Home Camera
First you should decompress the zip file. Then you need to copy the "home" file and "home_y18m" file into SD card

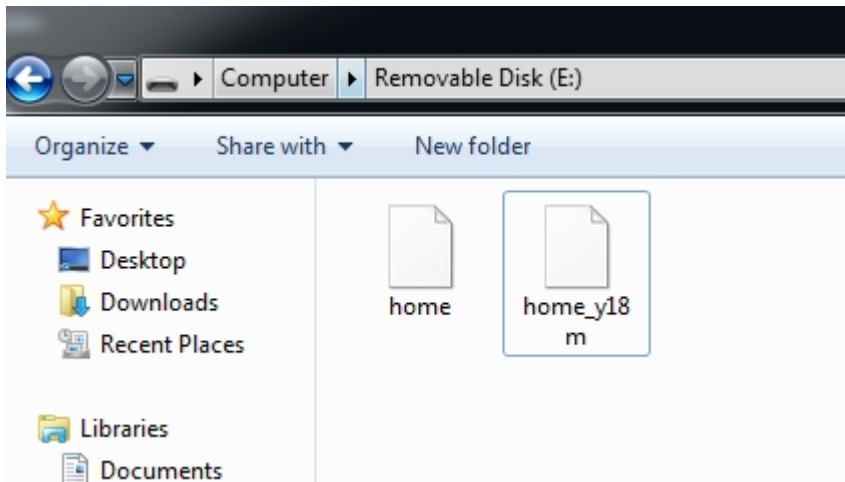

 
- YI 1080P Home Camera 2
It should be named with "home.bin".

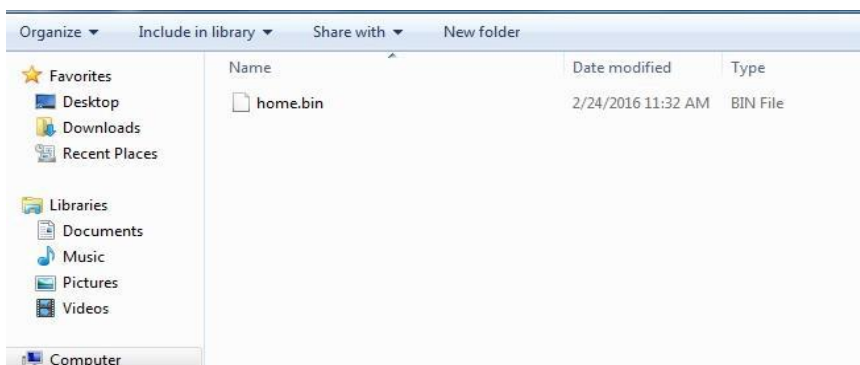

 
- YI Dome Camera
It should be named with “home_v200m”.

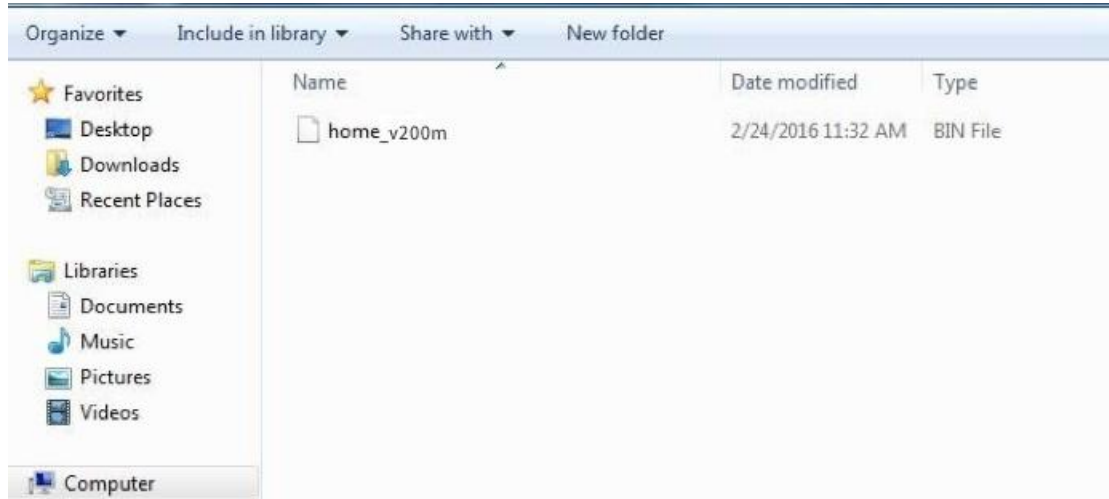

 
- YI 1080P Dome Camera
It should be named with “home_h20m”.

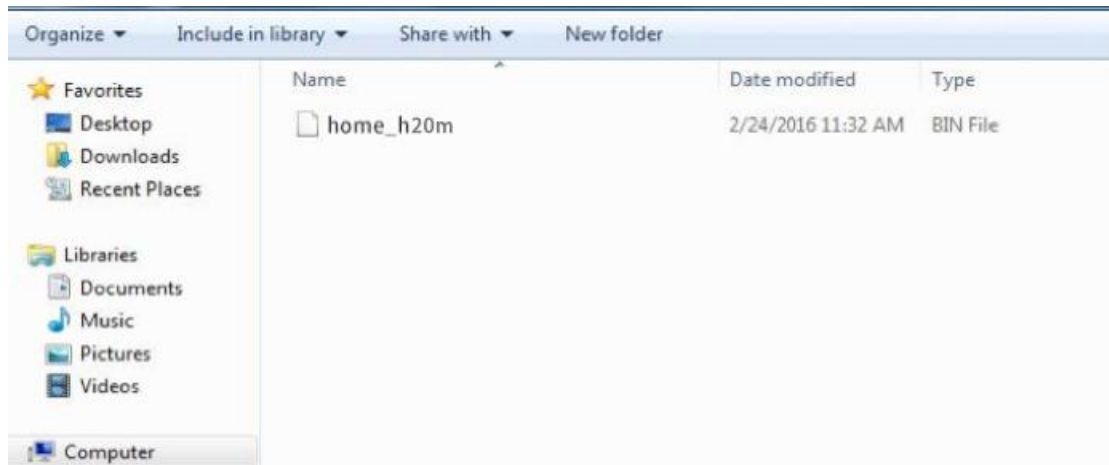

 - YI 1080P Home Camera
It should be named with “home_y20m”.

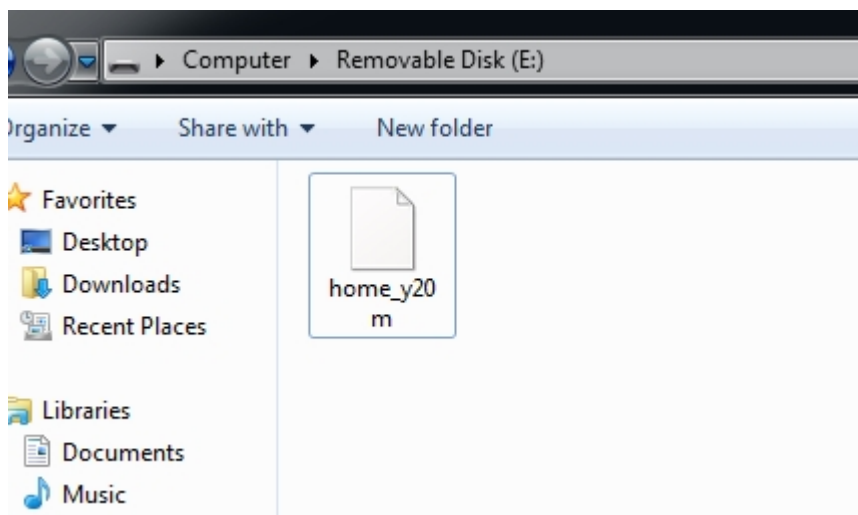

 4. Safely remove the card reader from PC, and insert the TF card into camera, then power it on.

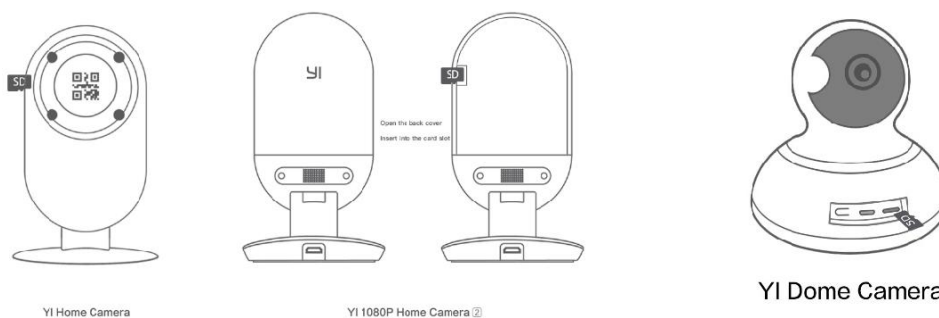

5. The camera firmware will be updated automatically. The whole process may take 2--3 minutes.

Note:

1. Re--pairing the camera may be needed in some cases, just follow the voice prompts.

2. If the camera is still out of use after update, it's recommended to reset the camera and then re---pair it with the App.
3. If you fail in updating process or still have problem, please contact ourcustomer Service.